





# Power Module

## Example :

When you have an FnIO setup and need to use with different Field Power Voltage, you can use the ST-7241, ST-7641 to change the distributed Voltage from 5Vdc/12Vdc/24Vdc/48Vdc, or from 110Vac/220Vac as below:

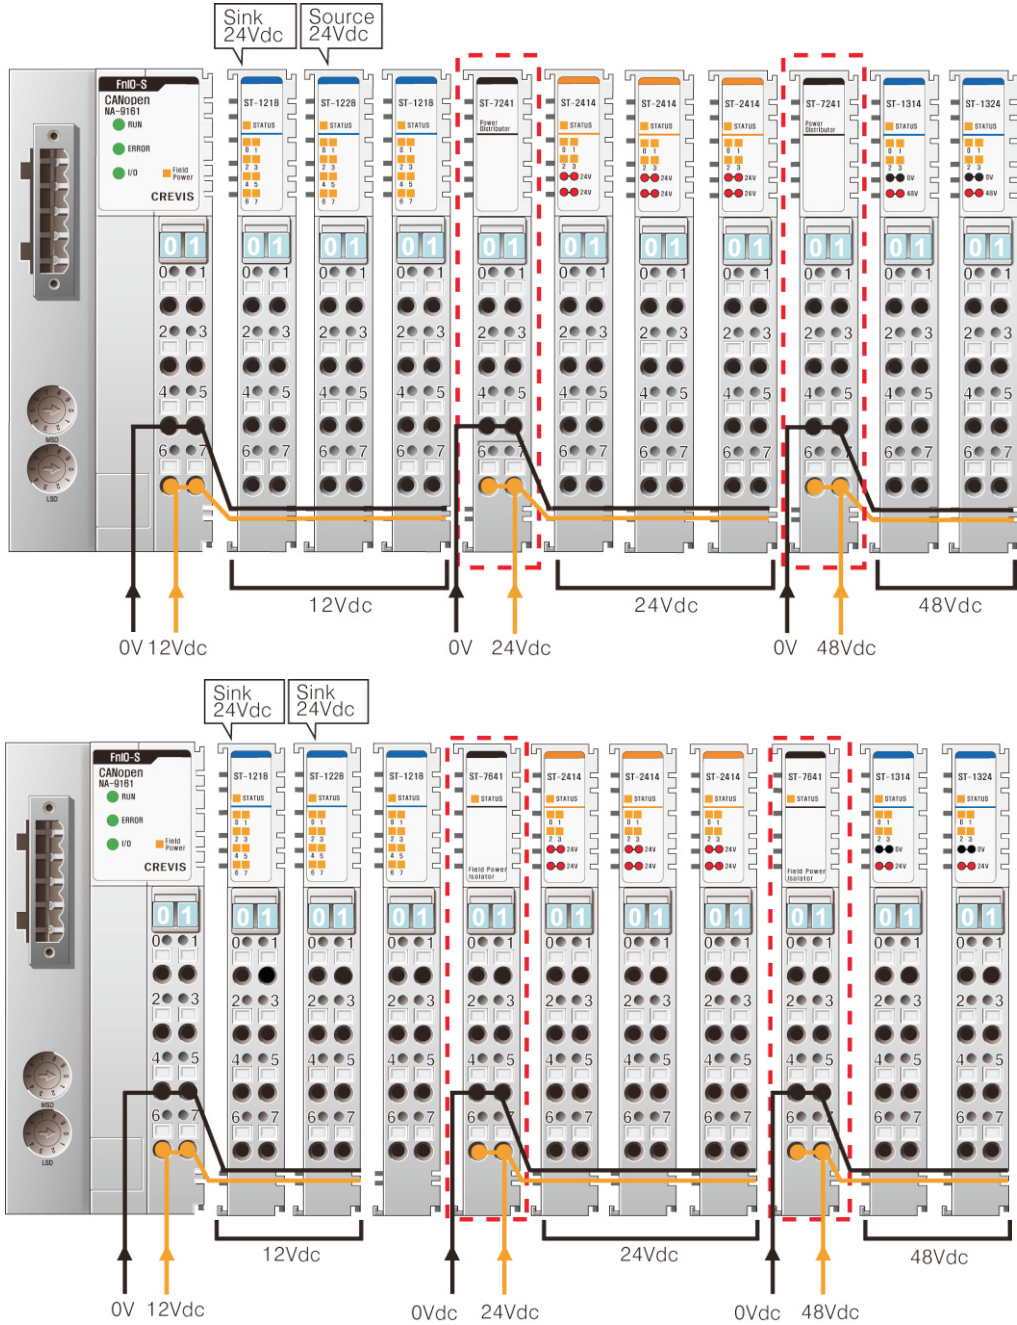
 
## Status LED



Status	STATUS LED is	Indicates
Not Power	OFF	Device has no expansion Module or May Not is Power.
No Initialized		The Parameter is not initialized yet
Fn-Bus Connection	Green	Fn-Bus Normal Operation
Fn-Bus Ready	Flashing Green	Fn-Bus Ready
Fn-Bus Fault	Flashing Red	Fn-Bus failed Communication
Device Fault	Red	Device Fault